

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required

Assistance is necessary to handle, fit, and secure some components.

Squareness is very Important!

Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!


- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP!

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call
us toll free at 1-800-437-0784


STOP!

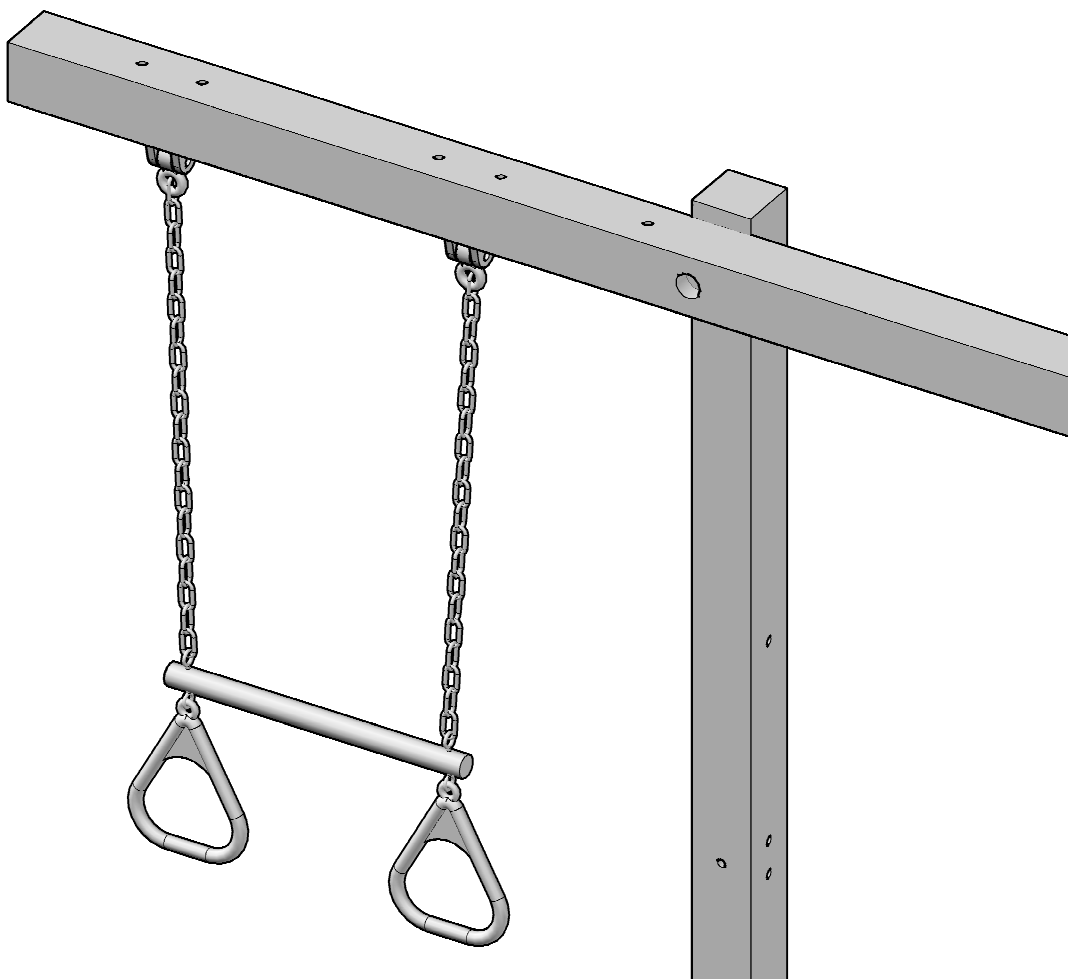

PARTS LIST

NOTE: Each wood part is stamped with part identification number.


3-1/2 x 3-1/2 x 110"

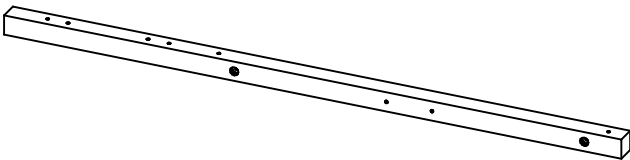

40 x1


ACCESSORIES

Swing Hanger

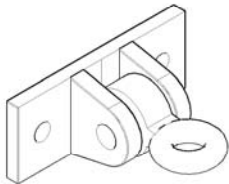

2433 x2

Trapeze

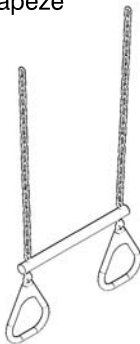


2435 x1

24" Extension Chains
(USE WHEN ATTACHING TO
7' DECK HEIGHT)



2591 x2

Spring clip

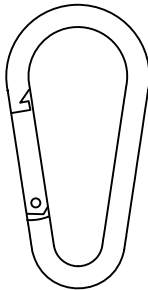


2004 x2

Quick Clip
(USE WHEN ATTACHING TO
7' DECK HEIGHT)




2020 x2

FASTENER/HARDWARE IDENTIFICATION (Shown Actual Size)

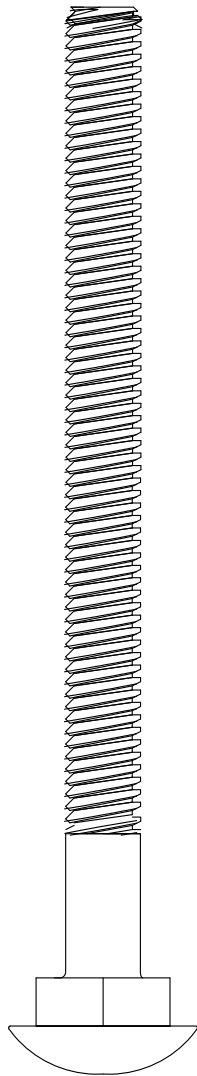


3/8 x 5" Carriage Bolt

☐ **x4**

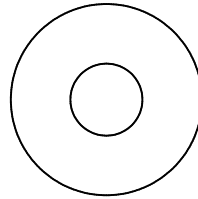


3/8" Flat Washer

☐ **x4**

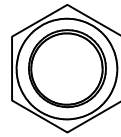

3/8" Lock Nut

☐ **x4**

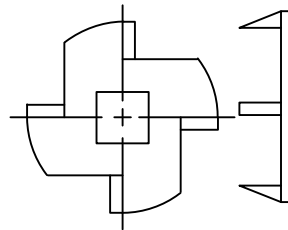

3/8" Torque Washer

☐ **x4**

TRAPEZE ASSEMBLY

PARTS REQUIRED:


- (1) [40] Trapeze Top Beam
- (1) 2435 Trapeze
- (2) 2004 Spring Clips

Note: For 7' Deck height use chain extensions and clips



x2 24\" Chain Extensions **x2** Quick Clip **x2** 2433 Swing Hanger

- 1) Place torque washer with teeth facing down. Insert Bolt and tap through hole
- 2) Make sure torque washer and bolt are centered over hole.
- 3) Pound Bolt to seat torque washer

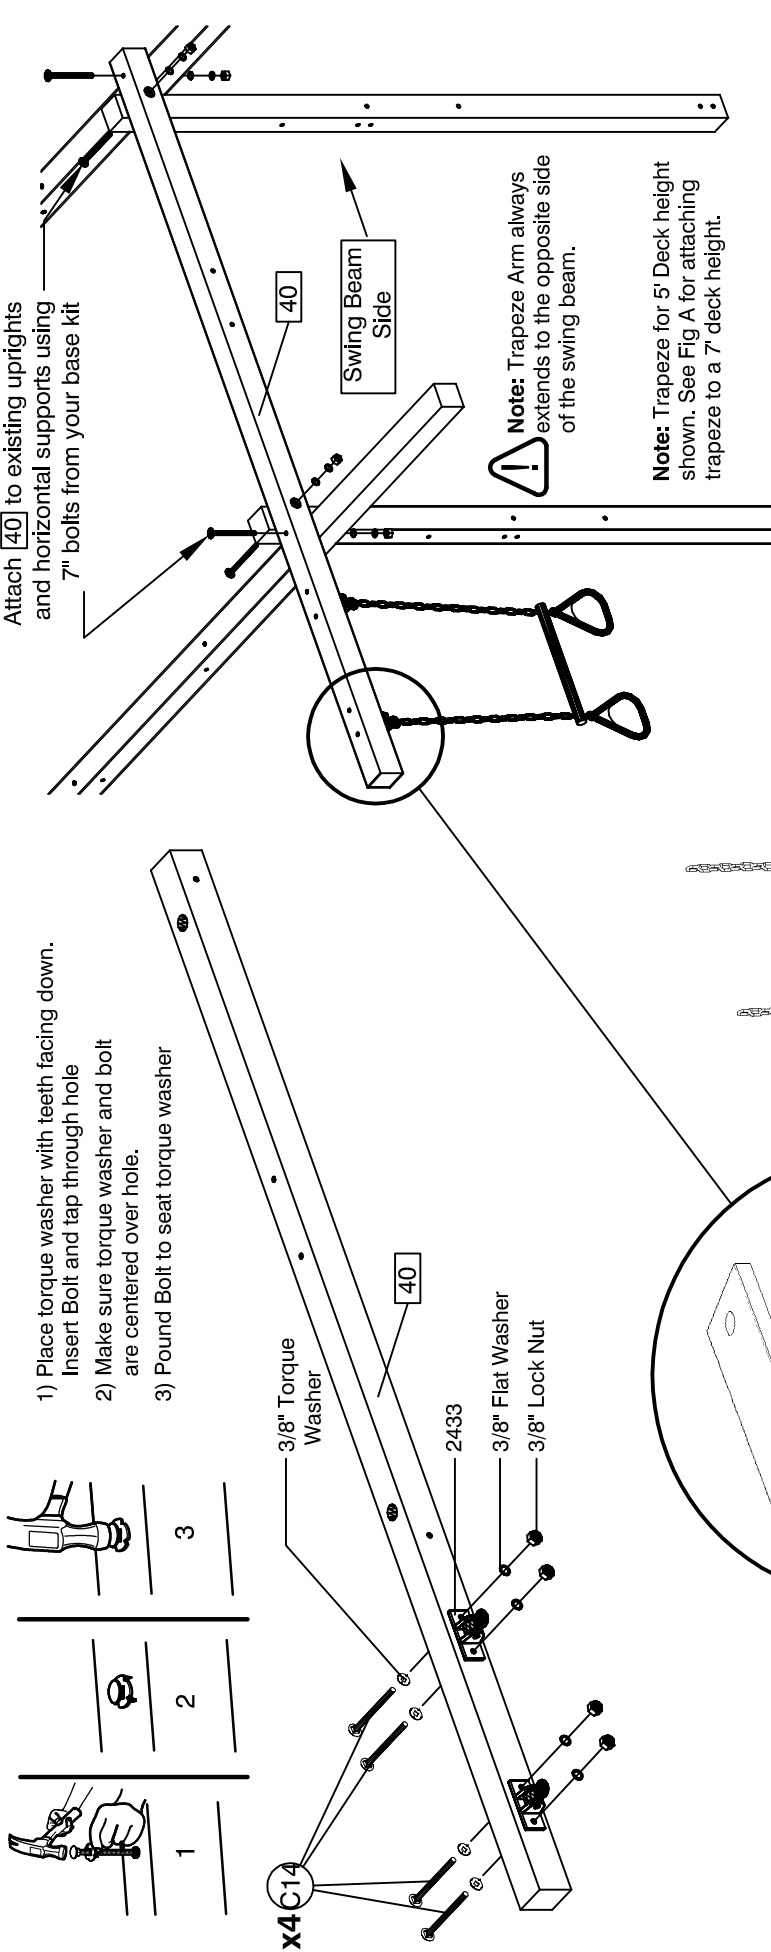

7' Deck Trapeze:
Use the chain extensions and quick clips for attaching the trapeze to a 7' deck height.

Chain Extension X2

Quick Clip X2

Attach a Spring Clip to the top of each trapeze chain and attach spring clip to swing hanger

2004

Fig. A

!! TIGHTEN QUICK CLIPS SECURELY USING HAND TOOLS PRIOR TO USING YOUR TRAPEZE !!